

AIRLAY[®]

floorcoverings

Sheet Vinyl Cleaning & Maintenance Guide



SHEET VINYL.

Sheet Vinyl Cleaning & Maintenance Guide

Manual cleaning

1. Remove debris dust and loose dirt.
2. Apply cleaner solution (warm water with detergent of ph 8 to 10)
3. Leave the solution on the floor for several minutes.
4. Scrub with synthetic brush or deck scrubber.
5. Remove cleaning solution using mop and twin bucket (to avoid dirt redistribution)
6. Mop rinse with clean warm water.
7. Allow to dry before trafficking the area.

Machine cleaning

1. Remove large debris and vacuum dirt and dust.
2. Apply cleaner solution (warm water with detergent of ph 8 to 10)
3. Leave the solution on the floor for several minutes.
4. Machine scrub using synthetic pad.
5. Wet vacuum loosened dirt.
6. Rinse with warm clean water.
7. Vacuum dry 8. Buff the floor to reactivate the PUR.

Tips/Recommendations

1. Clean your floor covering regularly.
2. Follow the flooring and cleaner manufacturer recommendations.
3. Remove stains immediately to limit risk of permanent damage.
4. Remove shoe scuffing immediately by using a dry scrubbing brush (no water or liquids)
5. Avoid contact with products likely to migrate into the vinyl and stain it permanently (ball point ink, asphalt, pine oil-based cleaner, lipstick, rubber tires, strong dyes etc.)
5. Periodically buff the floor to keep the PUR surface active and maintain general aesthetics.
6. Use only recommended cleaning liquids in the correct concentration.
7. Do not use high pressure cleaning machine.
8. Do not mix cleaning liquids 10. Protect newly laid floor from other trades using suitable protective covering.

AIRLAY & its distributors, resellers or representatives will not assume responsibility for any failure of material that is caused by any of the above or problems caused by incorrect installation or abuse or misuse of the material. When in doubt, please contact the supplier from where you purchased the product.